**O KIKUSUI** 

Pulse Charging/Discharging Capability!!



OKIKUSUI



Equipped with Power Regeneration Function -PEX2021

5 V/5 A, 25 W × 2 channels (PFX2011) 10 μA resolution and low range operation for low rates (PFX2011) High capacity of 20 V/10 A and 200 W supported (PFX2021)



# battery test system **PFX2000**

# Supporting highly flexible battery evaluations for various test configurations from small-size desktop systems to large-scale systems with up to 240 channels


The PFX2000 Series offers a battery test system developed on the basis of the experience and know-how that we have amassed through implementing numerous custom-built battery evaluation systems.

This product adopts a unit structure that houses charging/ discharging power supply units (PFX2011 or PFX2021) in a single unit frame (PFX2332). This enables you to build your battery test environment in varying scale, from a small-size system with a single cell to a large-scale system consisting of up to 120 units (max. 240 channels when all the units used are PFX2011), thus making it possible to support virtually any number of channels necessary for the intended test. What's more, the PFX2000 Series provides high availability by allowing you to replace only those units that need maintenance and to continue the test without shutting down the entire system (hot plug feature). Each channel is completely independent of one another and thus can be controlled under different test and timing conditions. In addition, the system supports a rich set of protection features (OVP, UVP, OHP, etc.) to prevent the test material from being destroyed by a system malfunction or

operation mistake.

PFX2021 (200-W unit) has a discharging mode that supports 20-value CC pulse and 20-value CP pulse discharging. It employs a V/F converter to measure current during pulse discharge, enabling quick measurement of the varying current and highly accurate capacity evaluation. This makes PFX2021 suitable for use in charging/discharging simulations for such devices as PCs and digital cameras. Furthermore, PFX2021 features a power regeneration function that allows the energy lost internally during discharge to be reused as the operation (charging) power, making this product more sophisticated as a charging/discharging power supply.

The application software (BPChecker2000), which is used to control the PFX2000 Series system, is capable of controlling up to six Espec Corp.'s thermostatic chambers for synchronized testing. Using this software in combination of the optional impedance measurement unit (PFX2211) can automate the temperature characteristic testing process including impedance measurement.

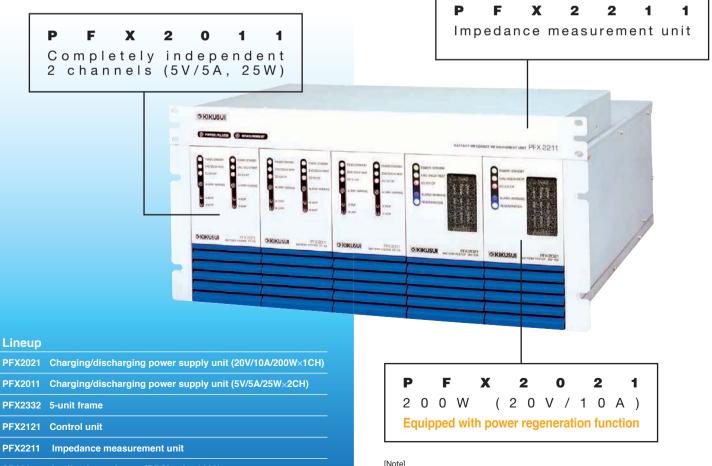

SD002 Application software (BPChecker2000)

PFX2021 cannot be operated in the previous model of the 5-unit frame (PFX2331).

# Suitable for characteristic evaluations for single-cell batteries and mobile phones **PFX2011** 5V-5A 25W 2CH



#### Completely independent channels

The two channels of the unit are completely independent of one another and thus can be controlled under different test conditions.

#### 8-value CC pulse mode

Constant current pulse discharging mode for reproducing GSM and PDC burst patterns

#### High and low current ranges

You can toggle between two current ranges - high range with 0.1-mA resolution and low range with 0.01-mA resolution. In the low range, reproducibility and accuracy can be implemented with 1-mA resolution, thus making product suitable for standby-mode current simulations for mobile devices.

#### Pulse charging

Sophisticated charger simulations involving such types of pulses as constant current pulses and PWM pulses are possible.

# Ideal for characteristic evaluations for notebook PCs, digital cameras, etc. **PFX2021** 20V-10A 200W



#### • 20-value CP pulse discharging function

This function is intended for constant power load fluctuation simulations using a DC/DC converter.

#### • 20-value CC pulse discharging function

The constant current 20-value pulse discharging mode is offered as the standard discharging mode.

#### V/F converter

Even changes in transient current during discharge can also be measured, enabling real-to-life measurement of capacity and electric energy.

#### Power regeneration function

A power saving mode is supported whereby the energy lost internally during discharge can be reused as the operation power.

#### Pulse charging

Sophisticated charger simulations involving such types of pulses as constant current pulses and PWM pulses are possible.

#### Main Specifications (Comparison between PFX2011 and PFX2021)


Unit model name	PFX2011	PFX2021	
Number of output channels	2	1	
Charging ourrent range	0.0mA to 5000.0mA (high range)	0mA to 10000mA	
Charging current range	0.00mA to 500.00mA (low range)	UNA LO TOUDUNA	
Charging voltage range	0.0000V to 5.0000V	0 to 20.000V	
Charging mode	CC/CC-CV/	PWM pulse	
	0.0mA to 5000.0mA (high range)	0mA to 10000mA	
Discharging current range	0.00mA to 500.00mA (low range)	UNA LO TOUDUNA	
Discharging voltage range	-0.5000V to 5.0000V	-2.000 to 20.000V	
Maximum charging/ discharging power	25.00W	200.00W	
Discharging mode	CC/CP/CC8-value pulse	CC/CP/CC20-value pulse/ CP20-value pulse	
Measurement parameters	ment parameters Voltage/current/capacity/electric energy/ temperature/high voltage/low voltage		



#### **Hot Plug Feature**

When in standby mode, any charging/discharging power supply unit can be replaced without turning off the power of the unit frame.

## **System Configuration**

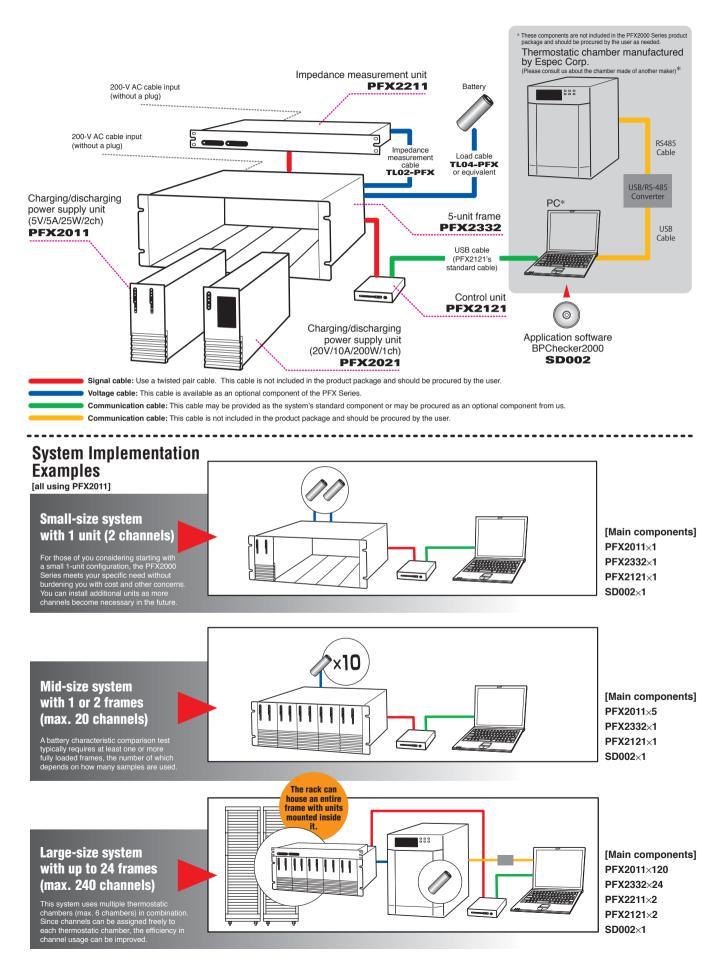

### **Features**

#### Pulse Charging/Discharging Function

A pulse charging mode is supported to assist you in R&D efforts on sophisticated charger simulations and charging methods. Also, PFX2021 has a 20-value CP and CC pulse discharging function. These features enable you to perform discharging simulations for packaged batteries used in notebook PCs and digital cameras.

#### Diverse Charging/Discharging Termination Conditions


A number of conditions, such as voltage, time, and temperature, can be specified as the charging and discharging termination conditions.

#### **Highly Accurate Measurement Capability**

A 24-bit A/D converter is adopted for measuring voltage and current values, thus enabling highly accurate measurement. Also, a built-in, temperature-controlled reference voltage circuit ensures highly stable operation. A 16-bit D/A converter and a high-speed A/D converter are fully utilized for pulse charging and discharging, thereby making it possible to generate complex current waveforms, measure the voltage at any given point, and evaluate the pulse current. In addition, a V/ F converter specifically designed for average current measurement is employed to provide faithful measurement of average pulse currents (PFX2021 only). The transient state of the pulse current can also be measured exactly. Error in current measurement resulting from the unbalance between the first and last transitions


#### Conceptual Diagrams of Charging Mode Operation

#### CC-CV (constant current-constant voltage)

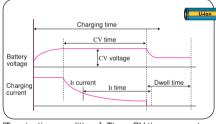


[Termination conditions] Time, CV time, current, and temperature

#### CC (constant current)

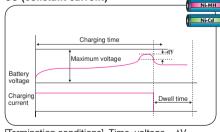

[Termination conditions] Time, voltage, – $\Delta V\!\!,$  temperature, and  $\Delta T/\Delta t$ 

#### CC PWM (constant current PWM pulse)

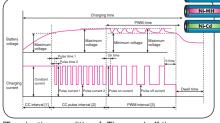

## is minimized. Temperature Measurement Function

The system features a simple temperature measurement function that uses a thermister (which comes with PFX2332) as a thermometer, making it possible to measure temperature on a channel-by-channel basis. Also, in addition to allowing over temperature protection (OTP) to be set as a protection function, the system permits you to specify dT/dt (temperature rise per unit time) and MaxTemp (maximum temperature) as the charging termination conditions.

#### **Enhanced System Reliability**

Various protection functions including overvoltage (overcharge) protection (OVP), undervoltage (overdischarge) protection (UVP), and overheat protection (OHP), as well as a watchdog timer (system monitoring), are provided to enhance the system reliability. In particular, the OVP and UVP functions support a dual protection mechanism offering softwarebased and hardware-based protections. Furthermore, the system uses a MOS FET to switch states in the charge/discharge/dwell cycle, making it reliable enough to endure long consecutive operation.

#### **Power Regeneration Function**

If a preset amount of energy is lost internally during a discharge test, the power regeneration function reuses the lost energy as the operation power. This function contributes to making the system smaller, achieving power savings, and reducing waste heat. (For PFX2021 only)

# Battery Voltage Detection Terminal with High Input Resistance

The battery voltage detection terminal has high input resistance (10 G $\Omega$ ). Since there is very little leak current, it is almost unlikely that the battery will dry out during a test dwell.

## Two Independent Channels Built in One Unit

The two channels are completely independent of one another, and a different set of test conditions can be set for each of them. (For PFX2011 only)

#### **Hot Plug Feature**

When in standby mode, any charging/ discharging power supply unit can be replaced without turning off the power of the unit frame.

#### Frames Interconnected via a TP-BUS

The 5-unit frames are interconnected to one another and connected to the control unit via a TP-BUS. To disconnect a unit frame from the TP-BUS does not require turning off the power of any other frame connected.

#### **Control Unit Supporting Multiple Channels**


The control unit PFX2121 can control a large number of channels, supporting up to 120 channels per unit (when all the controlled power supply units are PFX2011). Also, it has a USB port for connection with a PC. You do not need to prepare a separate interface board if the PC you want to connect supports the USB interface. Two control units can be connected to a single PC.

#### Conceptual Diagrams of Discharging Mode Operation


# CC (constant current)

[Termination conditions] Time and voltage


#### CC pulse (constant current 8-value/20-value pulse)\*

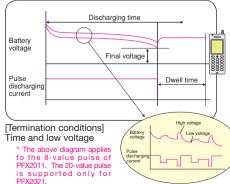

#### CP (constant power)

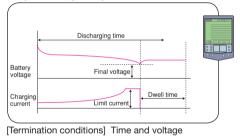

#### CP pulse (constant power 20-value pulse) \* For PFX2021 only

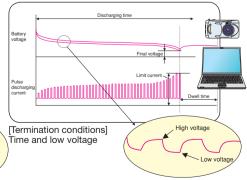

# **Application Software** SD002 BPChecker2000

BPChecker2000 is an application software package specifically designed for the PFX2000 Series system.

e <u>E</u> dit <u>V</u> iew F <u>a</u> vorites	Tools	Help					
<b>)</b> Back - 🌔 - 🏂	,∕⊃ s	iearch 🜔 Fol	ders 🛄 -				
dress 🗀 C:¥Documents and	d Settings	¥All Users.WIND	OWS¥Start Me	nu¥Programs¥Ki	kusui BPChecker	2000 V2 💌	→ Go
File and Folder Tasks	۲	Rept.		PBPC	BPC	BPC	
Other Places	۲	Hardware Config Wizard	Group Administrator		Test Executive	Graph Viewer	
	*						

BPChecker2000 enables you to set conditions for battery charging/discharging characteristic tests, run the tests, and analyzes test results using a PC. Capable of controlling two 120-channel control units (PFX2121) via the PC's USB ports, BPChecker2000 can exert control over up to 240 charging/ discharging power supply channels. By adding an impedance measurement unit (PFX2211), you can measure impedance of up to 120 charging/discharging power supply channels that are connected to the same control unit. Furthermore, if your PC supports the GPIB communication environment, you can have Espec Corp.'s thermostatic chambers externally controlled so that tests can be conducted in synchronization with the temperature inside the chambers.

• Program Structure BPChecker2000 consists of the five programs described below.

#### **Test Condition Editor**

This program lets you create and edit all conditions related to charging/discharging testing. A total of 15 sheets of test condition data can be created, with each sheet specifying both charging and discharging conditions. It is also possible to set the number of times (repeats) that an individual sheet is to be repeated to form a particular charging/discharging cycle, as well as the number of times (loops) that the entire set of sheets is to be repeated.


est Conditions	Charge Discharge									
Commenta	Range (199	No No	4 00-0V		Copy P		Copy To			
Bettery Info				and the second sec	Capy P		.00y 10			
Recording Method Impedance Measurement	Charge Time Rest Time	3	h a h a	100 700						
Life Judgement Sequence Seq Sheets	Current(mA)	820.0		Enable	R Functiona	lley .				
	CV Voltage[V]	4.2000		R Current		43.0				
1 2	CY Time	3	h 0 1	nin 2 Time	0	0 h	0 mit	9		
1	Resistance(kohm)									
000	Max Yokage[V]									
	that is the total of the	ninimy ,				• Functionality	53			
	-ch(V)			Max Tenpi	PS]					
10	-dV Mask Time(min)			dîja.						
11	Enable Chamber Co	ntrol								
13 19 14	Temperature[*C]	20.0		g Timeout (min)	100					
8	Humiday[%]	65.0		(Intel (Intel)	100					
201.92	(Specify -1 for Handle	e if not contro	(pnik							
Hant DRChercker20 Edt Vorm Ioolo Br		litor								
Edit View Iooto He I I Re Ch. (2) est Conditions Module	Charge Discharge	litor							ì	2
Edit View Tools He a Re CR. (2) wet Conditions Module Comments Battery Snlo	łb	fitor • Mo	de Pulse			opy Prom., . )	Copy Te.	1		
Elit View Toolo Ho ent Conditions Module Comments Battery Info Protections Recording Method	Charge Discharge   Range (suite Discharge Time		de Pube	-	Put	ue Settings	8	-	Responses Market	
Edit View Toolo H Conditions Module Comments Battery Prio Protections Recording Method Impedance Measurement	Charge Discharge   Range	- No		and the second se	P.A No	ue Settings	Pulse Mode	-	Negaration 14gh Low	t High
Edit View Toolo H eri Conditions Module Comments Battery Bro Protections Recording Wethod Impedance Heaturement Life Judgement	durge Discharge   Range (suite Discharge Time	• No 8	ha	-	Pui Na 2	o Cé Puise	8		High	
Sit View Tools He Ba Ch (2) est Conflictions Module Comments Interceptions Recording Method Interceptions Recording Method Sources Sources Sources Sources	Charge Discharge   Parge Discharge   Discharge Time Rest Time	- Mo 8 0	ha	-	Pul Nor 2	Current[mA]	Pulue Mode CC Time[ms] 0.55	, , , , , , , , , , , , , , , , , , ,	High Low	t High Low
Edit View Tools by Read Ch. (2) ent Conditions Modula Comments Battery bris Protections Recordsp Wetfold Inpodance Neaurement 1/8-3.40 Secondsp Wetfold Secondsp We	Charge Discharge   Rarge Discharge   Discharge Texe Rest Time Current[InA]	× Mo 8 0	ha	-	Pui No 2 1 2	Current(mA) 1580	Pube Mode CC Time[ms]	, ou 12	High Low smert(inA)	t High Lon Tane(ns)
Edit View Tools by For Rac (1) ent Conditions Modula Comments Exactions Two Protections Recording Wethod Insurance Transment Job Johnson Comments Southers Two Southers Two Southers Two Southers Souther	Charge Discharge Range Discharge Discharge Time Rest Time Current(mA) Wattage(W)	6 0	ha	-	No 1 2 3	Current[mA]	Pube Mode CC Time[ms] 0.55 4.05	9 0 11 12 13	High Low sment(InA)	t rsgh Lon Tme(ms) 0.0m 0.0m
Edit View Tools Ho Controls Contre	Charge Discharge Range Discharge Discharge Tese Rest Time Current(InA] Wattage[W] Linit Current(InA]	6 0	ha	-	No 2 1 2 3 4	Correct(mA) 1980 167	Public Mode CC Time[ms] 0.55 4.05	, 0 11 12 13 14	High Low prent(InA)	t rsgh Lon Tme(ms) 0.00 0.00 0.00 0.00 0.00
Edit View Tools Br Edit View Tools Br Contents Module Comments Battery bris Protections Protections Second Protections Second Protections	Charge Discharge   Range Discharge   Range   Discharge Tree Rest Tree Current[inA] Wattage[W] Lind Current[inA] Resstance[lurhe]	6 0 11 12 12 12 12 12 12 12 12 12 12 12 12	h a h a	-	N 2 1 2 3 4 5	Current(mA)	Public Hode CC Time[mi] 0.55 4.05	, 0 11 12 13 14 15	High Low anext[Ink]	t High Low Time(ms) 2.00 2.00 2.00 2.00 2.00 2.00 2.00 2.0
Edit View Toole by Connection Inductor Indu	Charge Discharge   Range Islaharge   Discharge Texe Rest Trice Currer(InA] Watage(W) Link Currer(InA) Restation(Chrin) CV Vatage(V)	6 0 11 12 12 12 12 12 12 12 12 12 12 12 12	h a h a	***	No 2 1 2 3 4 5 6	Correct(mA) 1980 167	Pube Hode CC Time[ms] 0.55 4.05 0.51	, 11 12 13 14 15 15	High Low strend(InA)	t High Low Time(ms)
Edit University of the second	Charge Discharge   Range Islaharge   Discharge Texe Rest Trice Currer(InA] Watage(W) Link Currer(InA) Restation(Chrin) CV Vatage(V)	6 0 11 12 12 12 12 12 12 12 12 12 12 12 12	h a h a	***	Na 2 1 2 3 4 5 6 7	Current(mA)	Pube Hode CC Time[rs] 0.55 4.05 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5	0 11 12 13 14 15 15 15	High Low prent(InA)	High Lon Tine(rs) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0
Edit         Low         Low         Low           Bit	Charge Discharge   Range Busharge   Darcharge Treat Bast Thes Ourner(InA) Watasp(W) Link Conner(InA) CV Wabap(V) CV Treat R-COnner(InA)	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	h a h a	***	No 2 1 2 3 4 5 6	Current(mA)	Pube Mode CC Time[ma] 0.55 4.05 1.05	, 11 12 13 14 15 15	High Low strend(InA)	High Lon Tine(ns) 0.00 0.00 0.00 0.00 0.00 0.00 0.00 0.
Ede Vew Tools 15 Ba Carlos Contento Conteno	Clurge Discharge   Range Discharge   Discharge Tree Rest Tree Correct(nA] wattop(U) Lost Currect(nA) Restanciberte] CV vallage(U) Lost Tree R Current(nA) Correct(nA)	6 0 11 12 12 12 12 12 12 12 12 12 12 12 12	h a h a	***	No 2 1 2 3 4 5 6 7 8	Current(mA)	Pube Hode CC Time[rs] 0.55 4.05 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5	0 11 12 13 14 15 15 15 15 15	High Low arrent(InA)	High Lon Tine(rs) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0
Edit Verw Tools 19 Edit Ra Collocation Addate to Conditioner Addate to Conditioner Adda	Rog Bidlarge Decharge Tese Read Tese Conner((nA) watnop(tv) Link Conner((nA) watnop(tv) Civ Tese R Conner((nA) Civ Mosp(tv) Cust Watop(t)	6 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	h a h a	***	Na 2 1 2 3 4 5 6 7 8 9	Current(mA)	Pulan Mode CC Time[ms] 0.59 1.05 1.05 1.05 1.05 1.05 1.05 1.05 1.05	0 11 12 13 14 15 15 15 15 19	High Low arrent(nA)	15gh Lon Tme(ns) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0
Ede Vew Tools 15 Ba Ra C (2) Mada Constants Mada Constants	Charge Discharge   Reco 000 Discharge Tese Rest Time Control(nel) Watage(V) Link Consec(nel) Restarce(char) Restarce(char) Restarce(char) R Consec(nel) C Tese R Consec(nel) C Cast Vatage(V) Classic Vatage(V)	6 0 10 10 10 10 10 10 10 10 10 10 10 10 1	* •		Na 2 1 2 3 4 5 6 7 8 9 10	Current(mA)	Pulan Mode CC Time[ms] 0.59 1.05 1.05 1.05 1.05 1.05 1.05 1.05 1.05	0 11 12 13 14 15 15 15 15 19	High Low arrent(nA)	15gh Lon Tme(ns) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0
Edit U was jook 19     Edit (	Rome Cardinary Cardinary Rome Cardinary Rome Rome Rome Rome Rome Rome Rome Rome	6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	h	nan man nan	Na 2 3 4 5 6 7 8 9 10	Current(mA)	Pulan Mode CC Time[ms] 0.59 1.05 1.05 1.05 1.05 1.05 1.05 1.05 1.05	0 11 12 13 14 15 15 15 15 19	High Low arrent(nA)	15gh Lon Tme(ns) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0
Edit U was jook 19     Edit (	Charge Discharge   Reco 000 Discharge Tese Rest Time Control(nel) Watage(V) Link Consec(nel) Restarce(char) Restarce(char) Restarce(char) R Consec(nel) C Tese R Consec(nel) C Cast Vatage(V) Classic Vatage(V)	8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	h 0		Na 2 1 2 3 4 5 6 7 8 9 10	Current(mA)	Pulan Mode CC Time[ms] 0.59 1.05 1.05 1.05 1.05 1.05 1.05 1.05 1.05	0 11 12 13 14 15 15 15 15 19	High Low arrent(nA)	15gh Lon Tme(ms) 0.01 0.01 0.01 0.01 0.01 0.01 0.01 0.0

#### [Recommended Operating Environment]

- CPU: Pentium IV 1 GHz or faster- OS: Windows 2000 Professional (SP4 and Update Rollup1) or XP Professional (SP2 or later, x86), Vista (x86⊡x64) ■ Memory: 512 MB or more- HD drive: 50 MB of free space or more required for
- installation; 10 GB of free space or more recommended for data CD-ROM drive: Required for installing the applications
- Mouse: Required
- Display resolution: 1280 × 1024 or more
- Printer: Compatible with Windows
   No. of USB ports: More free USB ports than the number of control units to be used


#### **Test Executive**

test condition file created with Test Condition Editor. It starts and stops the test and monitors the test execution. The program provides a real-time graphic representation of the per-channel charging/ discharging trends.

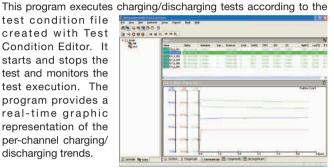

#### **Graph Viewer**

This program displays the test data, created with Test Executive, in a graph on the screen and lets you print it. It offers a graphic representation of the charging/discharging data of each cycle. You can display up to 99 sets of data overlaid one another and perform statistical processing.

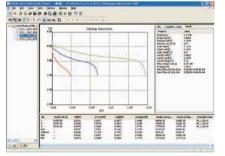

#### Hardware Configuration Wizard

This program detects the charging/discharging power supply units connected to the control unit and lets you configure the connection environment of other hardware devices (impedance measurement unit, thermostatic chamber, etc.).

#### **Group Administrator**

This program creates and deletes groups for performing the tests.

[Thermostatic Chamber Control]

- The thermostatic chambers that can be controlled via Espec Corp.'s protocol converter/USB-RS485 converter
- VISA library: NI-VISA 3.3 or later, Agilent I/O Libraries Suite 15.0 or later , or KI-VISA 3.1.3 or later

## **Specifications**

		PFX2011	PFX2021			
Rated output						
Number of output channels		2	1			
Charging current range		0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0mA to 10000mA			
Charging voltage range		0.0000V to 5.0000V	0.000 to 20.000V			
Discharging current range		0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0mA to 10000mA			
Discharging voltage range		-0.5000V to 5.0000V	-2.000V to 20.000V			
Maximum charging/disc	harging power	25W	200W			
Setting accuracy						
	Range	0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0mA to 10000mA			
Constant current	Accuracy*1	$\pm$ (0.05% + 1.0mA) (high range), $\pm$ (0.05% + 0.1mA) (low range)	±(0.15% + 2.0mA)			
charging/discharging	Resolution	0.1mA (high range), 0.01mA (low range)	1mA			
	Ripple*2	1mArms (high/low range)	3mArms			
	Range	0.0000V to 5.0000V	0.000V to 20.000V			
Constant voltage	Accuracy*3	±(0.03% + 1mV)	±(0.10% + 3.0mV)			
charging	Resolution	0.1mV	1mV			
	Ripple*2	2mVrms	5mVrms			
Constant nower	Range	0.01W to 25.00W (high range), 0.001W to 2.500W (low range)	0.02W to 200.00W			
Constant power discharging	Accuracy*4	$\pm$ (0.1% + 10mW) (high range), $\pm$ (0.1% + 2mW) (low range)	±(0.50% + 20.0mW)			
	Resolution*5	10mW (high range), 1mW (low range)	10mW			
	Range	0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0mA to 10000mA			
D I	Resolution	0.1mA (high range), 0.01mA (low range)	1mA			
Pulse constant current discharging	Accuracy*1	±(0.07% + 1mA) (high range), ±(0.07% + 0.1mA) (low range)	±(0.15% + 3mA)			
	Number of settings	8 values	20 values			
	Response*6	50µs (TYP)	70µs (TYP)			
	Range		0.02 W to 200.00 W			
Dulas senstant accurs	Resolution		10 mW			
Pulse constant power discharging	Accuracy		±(0.5 %+20.0 mW)			
Number of settings			20 values			
	Update rate		2 ms (typical)			
	Range*7	0.50ms to 65000.00msec				
Pulse time width Resolution		10µs				
	Accuracy	±(0.05% + 0.05ms)				
Measurement accuracy						
	Range	0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0.0mA to 10000.0mA			
Current measurement	Accuracy*8	$\pm$ (0.04% + 0.8mA) (high range), $\pm$ (0.04% + 0.08mA) (low range)	±(0.15% + 1.5mA)			
	Resolution	0.1mA (high range), 0.01mA (low range)	0.1mA			
	Range	-0.5000V to 5.0000V	-2.0000V to 20.0000V			
Voltage measurement	Accuracy*8	±(0.02% + 1mV)	±(0.10% + 2.0mV)			
	Resolution	0.1mV				
	Measurement value*9	Average current				
Pulse charging/	Range	0.0mA to 5000.0mA (high range), 0.00mA to 500.00mA (low range)	0.0mA to 10000.0mA			
discharging current	Accuracy	$\pm$ (0.1% + 1mA) (high range), $\pm$ (0.1% + 0.1mA) (low range)	±(0.20% + 3.0mA)			
	Resolution	0.1mA (high range), 0.01mA (low range)	0.1mA			
	Measurement point	High/low, any given point				
Pulse battery voltage	Range	-0.5000V to 5.0000V	-2.0000V to 20.0000V			
	Accuracy	±(0.05% + 1mV)	±(0.15% + 2mV)			
General specifications						
Power	At rated output	400VA Max	800VA Max			
consumption*10		60VA Max				

\*1: Measured within the rated range with respect to the set current.
\*2: Maximum value at 10 Hz to 500 kHz
\*3: Measured within the rated range with respect to the set voltage.
\*4: Measured with respect to the set power when the battery voltage is not less than 0.5 V (PFX2011) or 2 V (PFX2021).
\*5: Voltage operation range (guaranteed value) for constant power discharging - 0.5 to 5 V (PFX2011) or 2 - 20 V (PFX2021).
\*6: At 10% to 90% of the pulse current waveform when the rated current is set; shorted at the end of the 7-meter load cable.
\*7: The pulse time width is measured by the mesial magnitude of the pulse.
\*8: Measured within the rated range with respect to the measured value.
\*9: Average current measured at intervals of 500 ms

#### Order information

Model name	Product name
PFX2011	Charging/discharging power supply unit (2 channels)
PFX2021	Charging/discharging power supply unit (1 channel)
PFX2332	5-unit frame
PFX2121	Control unit (max. 120 channels)
PFX2211	Impedance measurement unit
SD002	Application software BPChecker

Impedance measurement cable
TL02-PFX (1M)* Cable length: 1 m
TL02-PFX (3M)* Cable length: 3 m
TL02-PFX (5M)* Cable length: 5 m
Load cable (7 m)
TL04-PFX* Cable kit for PFX2011
TL06-PFX* Assembled product for PFX2011
TL05-PFX* Cable kit for PFX2021
TL07-PFX* Assembled product for PFX2021



**KIKUSUI ELECTRONICS CORPORATION** 

1-1-3, Higashiyamata, Tsuzuki-ku, Yokohama, 224-0023, Japan Phone: (+81) 45-593-7570, Facsimile: (+81) 45-593-7571, www.kikusui.co.jp



KIKUSUI AMERICA, INC.1-877-876-2807 www.kikusuiamerica.com 2975 Bowers Avenue, Suite 307, Santa Clara, CA 95051 Phone : 408-980-9433 Facsimile : 408-980-9409

KIKUSUI TRADING (SHANGHAI) Co., Ltd. www.kikusui.cn Room308,Building 2, No.641,Tianshan Road, Shanghai City, China Phone : 021-5887-9067 Facsimile : 021-5887-9069

For our local sales distributors and representatives, please refer to "sales network" of our website.

Distributor:

All products contained in this catalogue are equipment and devices that are premised on use under the supervision of qualified personnel, and are not designed or produced for home-use or use by general consumers. Bepecifications, design and so forth are subject to change without prior notice to improve the quality. IP roduct names and prices are subject to change and production may be discontinued when necessary. IP roduct names, company names and brand names contained in this catalogue represent the respective registered trade name or trade mark. III Colors, textures and so forth of photographs shown in this catalogue may differ from actual products due to a limited fidelity in printing. III Although every effort has been made to provide the information as accurate as possible for this catalogue, certain details have unavoidably been omitted due to limitations in space. III fyou find any misprints or errors in this catalogue, two udie to a voide in form us. IPlease contact our distributors to confirm specifications, price, accessories or anything that may be unclear when placing an order or concluding a purchasing agreement.

Printed in Japan

Issue:Jul.2016 201607-EC91