# Ultra High Purity Immersible Thermal Gas Mass Flow Meter

# **Features**

- The ultra high purity meters are constructed of 316L electro-polished stainless-steel with a 7 to 10 Ra (0.18 to 0.25 Ra (μm) ) interior finish
- Measures mass flow directly, no separate temperature or pressure inputs required
- Built-in flow conditioner which eliminates velocity-profile distortions caused by upstream disturbances
- Field adjustment of critical flow meter settings via on-board switches or Smart Interface<sup>TM</sup> (RS-232)
- Field validation of flow meter calibration
- Outstanding rangeability
- One-second response to changes in flow rate
- FM, CSA and ATEX certified for hazardous areas
- ■CE approved
- PED available
- Supports Modbus, Profibus DP, HART and Foundation Fieldbus



#### Description

ierra Instruments' ultra high purity (UHP) 780S immersible thermal gas mass flow meters are the instruments of choice for gas distribution service in semiconductor fabs, pharmaceutical production and other ultra-clean processes. UHP meters are constructed of 316L electro-polished stainless-steel with a 7 to 10 Ra (0.18 to 0.25 Ra (µm) ) interior finish.

The versatile microprocessor-based transmitter integrates the functions of flow-range adjustment, meter validation and diagnostics in either a probe-mounted or remote housing. Mass flow rate and totalized flow, as well as other configuration variables, are displayed on the optional 2 x 12 LCD display The programmable transmitter is easily configured via an RS-232 communication port and Sierra's Smart Interface<sup>TM</sup> software, or via the display and magnetic switches on the instruments display.

The 780S smart electronics allow you to easily configure the following performance parameters: flow range, reset totalizer, alarm settings, time response, low flow cut-off and a calibration correction factor. The Smart Interface<sup>TM</sup> also allows for field validation of flow meter performance and calibration.

The 780S has a built-in flow conditioning which eliminates velocity-profile distortions caused by upstream disturbances.

The meter is FM, CSA, ATEX and PED approved for operation in hazardous areas and is available with a variety of input power, output signal, mounting and packaging options.



SIERRA INSTRUMENTS, NORTH AMERICA • 5 Harris Court, Building L • Monterey, California • (800) 866-0200 • +1 (831) 373-0200 • Fax: +1(831) 373-4402


SIERRA INSTRUMENTS, EUROPE ● Bijlmansweid 2 ● 1934 RE Egmond a/d Hoef ● The Netherlands ● +31 (0) 72 5071400 ● Fax +31 (0) 72 5071401

SIERRA INSTRUMENTS, ASIA • Second Floor Building 5 • Senpu Industrial Park • 25 Hangdu Road Hangtou Town • Pu Dong New District • Shanghai, P.R. China 201316 • +8621 5879 8521/22 • Fax: +8621 5879 858

For information online: www.sierrainstruments.com

# **Dimensional Specifications**

# 1 Through 6-inch 780S UHP (E2)

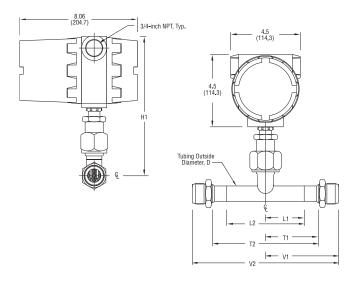

780S UHP DIMENSIONS										
TUBING	GENERAL		BUTT WELD		TRI-CLAMP		VCR	TUBE		
SIZE	H1	H2	L1	L2	T1	T2	V1	V2	WALL	
.375 (9.5)	10.30 (262)	10.20 (259)	2.85 (72.4)	5.70 (144.8)	_	_	3.48 (88.4)	6.96 (176.8)	.035 (0.9)	
.500 (12.7)	10.40 (264)	10.20 (259)	2.90 (73.7)	5.80 (147.3)	_	_	4.00 (101.6)	8.00 (203.2)	.049 (1.2)	
1.00 (25.4)	9.10 (231.1)	9.20 (234)	2.50 (63.5)	5.00 (127)	3.00 (76.2)	6.00 (152.4)	4.72 (119.9)	9.44 (239.8)	.065 (1.7)	
1.50 (38.1)	9.10 (231.1)	9.30 (131.3)	2.00 (50.8)	5.50 (139.7)	2.50 (63.5)	6.50 (165.1)	_	_	.065 (1.7)	
2.00 (50.8)	10.90 (276.9)	10.80 (183.1)	2.50 (63.5)	7.00 (177.8)	3.00 (76.2)	8.00 (203.2)	_	_	.065 (1.7)	
3.00 (76.2)	10.70 (271.8)	10.90 (178.1)	3.00 (76.2)	10.50 (266.7)	3.50 (88.9)	11.50 (292.1)	_	_	.065 (1.7)	
4.00 (101.6)	10.70 (271.8)	10.90 (277)	4.00 (101.6)	14.00 (355.6)	4.62 (116.8)	15.25 (387.4)	_	_	.083 (2.1)	
6.00 (152.4)	12.70 (322.6)	11.90 (302)	6.00 (152.4)	21.00 (533.4)	_	_	_	_	.109 (2.8)	


UP STREAM STRAIGHT PIPE LENGTH REQUIREMENTS <sup>(1)</sup> AT 1 ATM									
Piping Condition	3/8 and 1/2-inch 780SUHP <sup>(2)</sup>	1 to 6-inch 780SUHP <sup>(4)</sup>							
Single 90° Elbow or T-Piece	1D	1D							
Reduction (4:1)	1D	3D							
Expansion (4:1)	3D	3D							
After Control Valve	3D	3D							
Two 90° Elbows (In Same Plane)	3D	3D							
Two 90° Elbows (Different Planes)	5D	5D							

Notes: (1) Number of diameters (D) of straight pipe required between upstream disturbance and the flow meter.


- (2) Requires 1D of straight pipe downstream of the flow meter.
- (3) Requires 3D of straight pipe downstream of the flow meter.
- (4) Requires 0D of straight pipe downstream of the flow meter.
- (5) Consult factory for pressure effect.

# Remote 780S UHP Specifications


# Remote Mounted with Junction Box (E4)

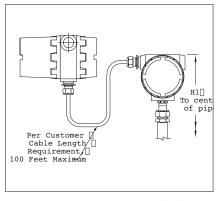


NEMA 4X Remote Mounted with Junction Box (EN4)

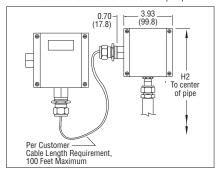

3/8 & 1/2-inch 780S UHP—Side View (EN2)

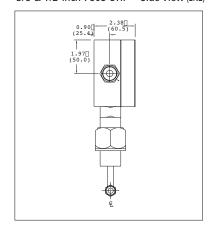

3/8 & 1/2-inch 780S UHP—Front View (EN2)

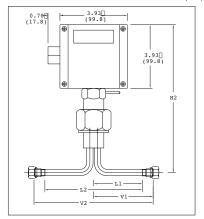

#### **Performance Specifications**

+/- 1% of reading + 0.5 % of full scale

#### Repeatability

+/- 0.2% of full scale

# Temperature Coefficient

- +/- 0.02% of reading per °F within +/- 50° F of customer specified conditions
- +/- 0.03% of reading per °F within +/- 50° F to 100° F of customer specified conditions
- +/- 0.04% of reading per °C within +/- 25° C of customer specified conditions
- +/- 0.06% of reading per °C within +/- 25° C to 50° C of customer specified conditions

# Pressure Coefficient

.02% per psi for air, consult factory for other gases

### Response Time

One second to 63% of final velocity value

# **Operating Specifications**

Argon, helium, hydrogen, nitrogen, oxygen (consult factory for other gases)

Mechanical design pressure:

Compression fittings: 500 psig (34.5 barg)

### Gas & Ambient Temperature

Gas.....-40° F to 250° F (-40° C to 120° C) Ambient . . . . . . . -40° F to 120° F (-40° C to 50° C)

#### Leak Integrity

5 X 10<sup>-9</sup> cc/sec of helium maximum

### **Power Requirements**

18 to 30 VDC (regulated), 625 mA maximum 100 to 240 VAC, 50/60 Hz, 15 watts maximum

Linear 0-5 VDC or 0-10 VDC proportional to mass flow rate, 1000 ohms minimum load resistance or

Linear 4-20 mA proportional to mass flow rate,

700 ohms maximum resistance power supply dependent User-selectable. Active non-galvanically separated or passive galvanically separated (loop powered)

See Digital Communications options below

Hard contact user-adjustable high and low Dead band adjustable with Smart Interface™ software Relay ratings: Maximum 400 VDC or VAC (peak), 140 mA

### Displays

Alphanumeric 2 x 12 digit backlit LCD

Adjustable variables via on-board switches (password protected)

or with Smart Interface™ software

Adjustable variable; Full scale (50 to 100 %)

Time Response (1 to 7 seconds) Correction factor setting (0.5 to 5)

Zero and span

### Totalizer

Seven digits (9,999,999) in engineering units Resettable by software, on-board switches or external magnet

#### Software

Smart Interface™ Windows®-based software Minimum 8 MB of RAM, preferred 16 MB of RAM RS-232 communication

Alarm dead band adjustment Additional features:

Zero cut-off adjustment Linearization adjustment Save / Load configurations Flow meter validation

# **Digital Communications**

Pulse (not available with E2-NR) Modbus RTU (not available with P3 option ) Profibus DP (available E2/E4-P2 configuration only) HART universal commands (available E2/E4-P2 configuration only)

Foundation Fieldbus (available E2/E4-P2 configuration only)

### **Physical Specifications**

#### **Wetted Materials**

316L stainless steel

UHP: 7 to 10 Ra (0.18 to 0.25 Ra (µm) ) internal finish

#### **Enclosure**

Hazardous-Area location enclosure (IP66) or NEMA 4X (IP65) Both are powder-coated cast aluminum

#### **Electrical Connection**

Two 3/4 inch NPT . . Hazardous-Area location enclosure (IP66)

One 1/2 inch NPT . . NEMA 4X Enclosure (IP65)

#### Certifications

CE (All enclosures)

CSA (Explosion proof for Class I, Division 1, Groups B, C, D)


ATEX ( II 2 GD Ex d IIC T6 ... T2; IP 66 T70 °C ... T280 °C )

FM (Explosion proof for Class I. Division 1, Groups B. C. D: dust-ignition proof for Class II, III, Division 1, Groups E, F, G)

IP65, NEMA 4X T6 -40° C to 70° C ambient

PED optional

### **Pressure Drop**

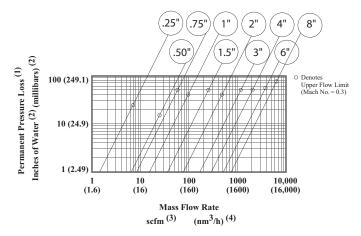

- Notes:
  (1) For air and nitrogen at 20 °C temperature and 1 atmosphere
- pressure.
  (2) 1 inch of water at 60  $^{\circ}$ F= 0.0361 psi. 1 millibar = 0.001 bar = 100 pascal = 0.0145 psi
- (3) At base conditions of 21.1 °C temperature and 1 atmosphere
- pressure.

  (4) At base conditions of 0 °C temperature and 1 atmosphere
- (5) Built-in flow conditioner consists of two separate perforated

<sup>®</sup> Viton, Neoprene, Kalrez, and Teflon are registered trademarks of Dupont. Windows and Excel are registered trademark of Microsoft.

